



Disc Changing

1. Hold your PIVOT 3U upside down.
2. Twist knob (A) on bottom of base plate (B) counter clockwise to remove. Set knob aside.
3. Remove base plate (B) and set aside.
4. Install desired disc (C) on clear plate (D).
5. Reinstall base plate and knob.

NOTE: Be GENTLE when handling and cleaning your clear acrylic plate. It is a delicate surface and will scratch easily. Do not use any cleansers on the plate as this will scratch or make the surface cloudy. We recommend using canned air to remove any dust.

