



model ULTRA3

ULTRASONIC WHOLE ROOM HUMIDIFIER OWNER'S GUIDE

READ AND SAVE
THESE INSTRUCTIONS

vornado.com

we expect this product to be PERFECT

if it's not, WE will make it right

vornado.com 800.234.0604 help@vornado.com

CONTENTS

Important Safety Instructions	4
Getting Started	7
Features	8
Controls	9
Filling Water Tank	10
How To Use	11
Mineral Cartridge	12

Automatic Refill Program	12
Cleaning	13
Storage	15
Troubleshooting	16
Warranty	17

READ AND SAVE THESE INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

This owner's guide and any additional inserts are considered part of the product. They contain important information about safety, use and disposal. Before using the product, please familiarize yourself with all operating and safety instructions. Please keep all documents for future reference and pass these documents on, together with the product, to any future owner. See our website to view, download and print the most current version of this owner's guide.

INTENDED USE: This product is intended to humidify and circulate the air in indoor living spaces only in the United States and Canada. This product is not intended for commercial or industrial use. The manufacturer assumes no responsibility for damage or injury due to unauthorized use or product modification. Failure to follow these directions will void the product warranty.

WARNING: Risk to Children and Impaired Persons

- Supervision is required during the installation, operation, cleaning and maintenance of this product by children age 12 years and younger and anyone with reduced physical, sensory or mental capabilities. Children should be supervised to ensure that they do not play with the appliance, its parts and packaging material.

INSTALLATION WARNING—To reduce risk of fire, electrical shock and injury to persons, observe the following:

 No part of this product (the appliance, power cord, plug, packaging, etc.) should be placed near furnaces, fireplaces, stoves or other high temperature heat sources. Do not use in a window, on an uneven or unstable surface, or near water.

- The appliance, power supply, power cord and plug cannot come into contact with water. Do not use this product on wet surfaces. Do not use this product in a bathtub or shower or position product where it may fall into a bathtub, laundry, swimming pool or other water container. Do not use this product outdoors or expose it to weather or elements.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over. The cord should not hang over edges of counters or be placed where it can be crimped or closed in doors. Place appliance near an easily accessible outlet so the product can be unplugged quickly during an emergency.

SAFE USE WARNING—To reduce risk of fire, electrical shock and injury to persons, observe the following:

- WARNING: To reduce likelihood of circuit overload, fire and electric shock, do not operate with a solid state speed device, such as a dimmer control switch.
- Do not operate unit if the unit has been dropped or damaged. Do not use this product if it has a damaged power cord or plug. To avoid risk of electrical shock, do not attempt to repair or replace parts. Only original replacement parts may be used. If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard. Contact Vornado Consumer Service at 1-800-234-0604 (phone) or consumerservice@vornado.com (email) for further instructions about replacement and repair.
- Risk of fire. Your appliance may be equipped with a detachable power supply or a cord/plug with a safety device such as a fuse. Use only the power cord and plug provided.

- Before plugging power cord into electrical outlet, be sure that all electrical information on the rating label, including voltage, is compatible with your outlet's power supply.
- Never use the cord as a handle or otherwise yank, strain or stretch the power cord.
- While the product is plugged in, do not insert or allow foreign objects to enter any input or output opening as this may cause risk of electric shock or fire, or damage the product.
- A loose fit between wall outlet (receptacle) and plug may cause overheating and distortion of the plug. Discontinue use of the product in this outlet. Contact a qualified electrician to replace loose or worn outlets.
- This appliance has a polarized plug (one blade is wider than the other.) To reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
- The product may be hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Always allow appliance to cool at least 30 minutes before moving, refilling or emptying it. Empty all water and dry unit before storing.
- Before filling with water, moving, repositioning, servicing, cleaning and when not in use, use the product controls to turn off the power and then unplug. To disconnect from outlet, grasp and pull only the plug. Also, power off and unplug if the product will be left unattended for an extended period of time or during electrical storms.
- Electric shock can occur when liquid comes in contact with electricity. Be careful when removing the water tank and refilling to avoid electric shock. Do not pour water through the top Outlet Air Grill on the power head.

- Turn the humidifier off if the relative humidity exceeds 60%. Humidity levels above 60% may allow moisture to build up indoors and condense on surfaces, where microorganisms can settle and grow. For accurate readings, use a hygrometer which is available at most hardware stores and home centers.
- The Mist Outlet must be used when operating this product. The Mist Outlet can be removed for cleaning.

SERVICING WARNING—To reduce risk of fire, electrical shock and injury to persons, observe the following:

- Clean your product regularly, only as is instructed in this manual. Prior to cleaning, turn off the power on your product and unplug. Do not use gasoline, thinners, solvents, ammonias or other chemicals for cleaning. Refer to the CLEANING instructions provided.
- Do not open appliance housing while product is plugged in. To avoid risk of shock, all service and/or repairs must be done by a Vornado Authorized Service Center.
- Protect against the growth of mold, mildew and other microorganisms by emptying the water tank immediately after each use. If water is left in the tank for longer than 8 hours, thoroughly clean and disinfect the unit as described in the section of this Owner's Guide referenced as "CLEANING".

DISPOSAL WARNING

To reduce waste and environmental harm, observe the following:



PACKAGE RECYCLING: The packaging protects the appliance from transport damage. The packaging materials are selected from the point of view of their environmental friendliness and disposal technology and are therefore

recyclable. Dispose of all packaging materials in an environmentally responsible manner.

FCC Compliance Statement

This equipment has been tested and complies with the Part 18 FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Contact Vornado Consumer Service or the dealer or an experienced radio/TV technician for help.

This device complies with Canadian ICES-001.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's FCC Declaration of Conformity

Unique Identifier: Vornado Model ULTRA3

Responsible Party: Vornado Air LLC

Mailing Address : 415 E. 13th St., Andover, KS 67002

Contact: www.vornado.com

SAVE THESE INSTRUCTIONS

GETTING STARTED

Before operating, ALWAYS reach under the humidifier and lift from the bottom. Before use, check appliance for visible damage. DO NOT USE if there is evidence of damage. If any damage is found, contact Vornado Air, LLC at 1-800-234-0604.



Check for Leaks

Damage due to shipping may cause leaks in Base or Water Tank. A visual inspection may not reveal hairline fractures.

- 1. Place humidifier on a water-resistant surface.
- 2. Fill Water Tank with water to inspect for leaks.
- 3. Pour several cups of water into Base to inspect for leaks.

Not Leaking?

Empty water from Base and install full Water Tank.

Leaking?

In the slight chance your humidifier has leaks, contact Consumer Service and we will immediately replace damaged parts.

A humidifier is quite useful in supplying necessary moisture to dry air. It should be used with proper care to prevent overhumidification.



A good rule of thumb would be to gauge the condensation or frost on windows. Adjust your humidifier to a point where this condition is at a minimum. These adjustments should be made when major changes in outdoor temperatures occur.

Humidifiers can be placed in any living area that has a convenient location and provides distribution of the moist air to the living area. The measured output of a humidifier is based upon continuous operation at standard rating conditions. With normal variations of indoor and outdoor conditions, the humidistat-controlled humidifier will not run continuously at maximum output unless the controls are set to do so.

INITIAL HUMIDITY REQUIREMENTS:

When initially installed or when placed in operation at the beginning of each season, the humidifier equipped with a humidistat may run constantly for a day or so and, thus, evaporate large quantities of moisture. When the home and its furnishings have absorbed moisture and become stabilized at the desired humidity level, the amount of water used will diminish and the humidifier operation will maintain the desired humidity level.

FEATURES

LED INDICATOR LIGHTS

Displays current settings.

POWER HEAD

Powerful motor circulates humidified air throughout whole room.

WATER TANK

Large 1 gallon capacity allows for fewer refills

INLET GRILLS

Designed for efficient air intake.

BASE

Durable and easy to clean.



AIR OUTLET GRILL

Initiates Vornado's signature Vortex circulation.

MIST OUTLET

Moist air is dispersed through the Mist Outlet and projected into Vornado's signature Vortex beam of air - circulating the moist air throughout the entire room



CLEANING BRUSH

Used for cleaning the Base in hard to reach areas. Stored in Base.



MINERAL CARTRIDGE


Removes minerals from the water, thereby softening the water and reducing harmful mineral buildup on the Transducer.



CAP & GASKET

Easy-to-remove Cap for convenient Water Tank refilling. The Gasket creates a waterproof seal between Cap and Water Tank

CONTROLS

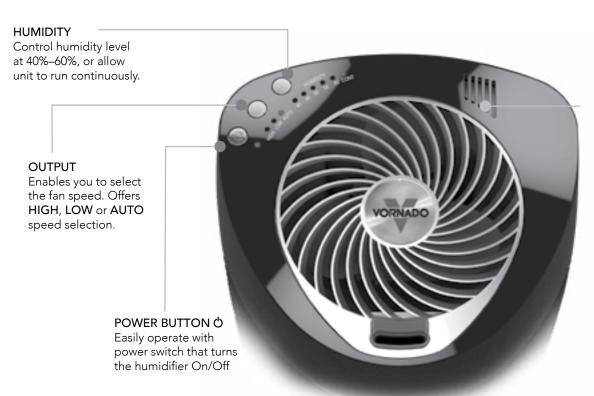

HUMIDISTAT

Reads humidity in room for automatic humidity control.

FILLING WATER TANK

Before initial use, you must soak the Mineral Cartridge in water for 24 hours. You may use a separate container or Water Tank to do so. If Tank is used, empty water and refill with fresh water prior to use.

Note: The unit may take several minutes to create mist with the initial use of a new Mineral Cartridge.


1. Unplug humidifier and place on level surface, such as floor.

Note: Spills can occur during cleaning, moving or refilling Water Tank, so be careful to avoid spills when doing these activities.

- 2. Remove Water Tank by grasping recessed handle and pulling toward you (A).
- 3. Turn Water Tank upside down and remove Cap (B).
- 4. Fill Water Tank with cool tap water (C).
- **5.** Ensure Gasket (rubber ring around Cap) is properly positioned and replace Cap. Some downward pressure may be needed to compress Gasket prior to rotating Cap 1/4 turn clockwise.
- **6.** Lower Water Tank into Base, positioning Water Tank over raised bump in Base (D). Once in nested position, water outlet valve inside Cap opens, releasing water into Base.

Note: The rate of water dispensing from Water Tank into Base is controlled by the Mineral Cartridge. The unit may take several minutes to fill the Base.

This humidifier has a 1-gallon capacity and 2-gallon output in 24 hours (if set to High Fan Speed, Continuous Humidity setting).

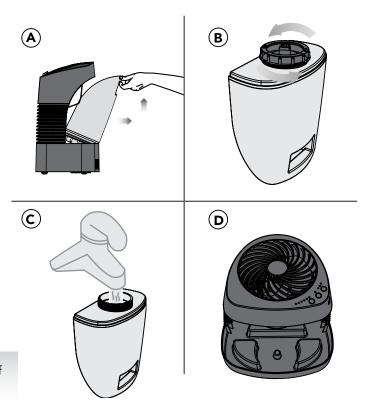

HOW TO USE

- 1. Position humidifier to not blow directly on objects or plants. Plug power cord into 110–120 volt AC outlet.
- **2.** To turn humidifier on, press Power Button. The indicator lights for Fan Speed and Humidity Level will set to default setting HIGH fan speed, Continuous humidity.
- 3. Adjust settings for desired operation.

Note: Lower humidity control settings or turn off humidifier if moisture forms on walls or windows.

HIGH

Operation for fast humidification of larger rooms. High-speed operation will evaporate 2 gallons of water (+/- 10%) in 24 hours of continuous operation. (This assumes room conditions of 70° F and 30% relative humidity.)

LOW

Operation for quiet, nighttime use or smaller rooms. On Low operation, your humidifier may run without refilling for extended periods.

AUTO

Operation for more precise humidity control. Fan speed and mist output will fluctuate to better maintain set humidity level with the minimal amount of fan noise.

HUMIDITY – 40%–60% OR CONTINUOUS

Set the humidity level by pressing the HUMIDITY button until the desired humidification level is illuminated. The humidifier will operate until the desired humidity level is reached. At this point, the mist will turn off but the fan will continue to run. The Humidity Level indicator light will remain on. If the mist does not turn on, the humidity setting may be lower than the room humidity level. Increase the humidity set point until the mist turns on. This is an indication of the level of humidity already in the room.

MINERAL CARTRIDGE

The Mineral Cartridge removes minerals from the water thereby softening the water and and reducing harmful mineral buildup on the Transducer.

WHEN TO REPLACE:

Many factors affect the frequency in which the Cartridge will need to be replaced including amount of use, water hardness, and outside environmental factors. For heavy use, using the unit continuously, we recommend replacing the Cartridge approximately once a month. For lighter use, using the unit intermittently, we recommend replacing the Cartridge every two months.

The Cartridge will need to be replaced earlier if white powder residue accumulates around the device. If the water used in the humidifier has been treated by a decalcification system, the salt from the treatment can show up as white dust also.

HOW TO REPLACE:

- Remove Water Tank. (See FILLING WATER TANK for instructions)
- 2. Unscrew Cap.
- **3.** Unscrew Mineral Cartridge from Cap (A). Discard Cartridge.





- **4.** Install new Cartridge onto Cap. Again, before use, soak cartridge in water for 24 hours.
 - **Note:** The unit may take several minutes to create mist with the initial use of a new Mineral Cartridge.
- **5.** If storing unit, empty Water Tank and reinstall Cap. Replace Tank back into unit. See STORAGE.

AUTOMATIC REFILL PROGRAM

Part # MD1-0018

Select the shipment interval and Vornado will send replacement Mineral Cartridges automatically. Eliminate the hassle of remembering to reorder. Maintain the high efficiency of your Vornado Humidifier. **To sign up,** visit vornado.com, email consumerservice@vornado.com or call 1-800-234-0604. Cancel at anytime.

CLEANING

Proper cleaning of your Ultrasonic Whole Room Humidifier is essential to the air quality and performance of your humidifier. The frequency in which your humidifier will need to be cleaned will vary depending on use, water hardness and outside environmental factors. It is recommended, assuming average use, to thoroughly clean the unit several times throughout the season, or when algae, mineral deposits or other particles begin to form.

 


TO CLEAN AND DISINFECT BASE

1. Turn humidifier Off and unplug.

Warning: Do not submerge humidifier in water.

- 2. Remove Water Tank and empty Tank along with Base. Rinse with clean tap water.
- 3. Mix solution of 1 teaspoon chlorine bleach and 1 gallon water. Fill Base with solution, wet all surfaces and discard unused solution. Let stand 20 minutes.
- **4.** Remove Mist Outlet by grasping base of Outlet and pulling up (A). Clean with solution as needed to remove scale.



CLEANING

Note: If the humidifier is turned Off with water in Base and not turned back on for 8 hours or longer, or if humidifier is not cleaned as recommended, you may experience some growth of algae or bacteria. These microorganisms may become airborne.





5. Empty and rinse with water until bleach smell is gone. Dry with clean cloth or paper towel.

TO CLEAN GRILL

1. Turn humidifer Off and unplug.

Note: Do not use gasoline, thinners, solvents or other chemicals for cleaning.

2. Use canned compressed air around the top outlet grill and side inlet grill. Follow up using brush attachment on your household vacuum cleaner to vacuum top outlet grill and side inlet grill. Wipe down entire surface with soft cloth.

STORAGE

During the off-season or after extended periods of non-use, you may choose to store your humidifier. To ensure long life of the product, it is recommended to store your humidifier by following these instructions:



Cleaning is recommended before storage.

- 1. Unplug power cord and bundle loosely.
- 2. Let humidifier dry completely before storing.

 Do not store with water inside Water Tank or Base.
- Cover, or place back in retail carton if available. This will prevent humidifier from accumulating dust over time.
- 4. Store humidifier in cool and dry location.

TIPS

Be aware of several things as your Vornado® Ultrasonic Whole Room Humidifier operates:

- If you operate your humidifier continuously (which is recommended to maintain humidity all day), it may need to be refilled with water every day. Check the Water Tank to be certain that there is an adequate water supply for operation.
- Allow for optimum airflow by keeping the grill unobstructed. Ensure curtains and other items are far enough away from the unit to not be pulled into the side inlets or interfere with airflow.
- Any additives, such as aroma fragrances or water conditioners, must not be used. These additives can cause cracks in the plastic of the humidifier and may affect performance.

 Any use of such additives voids the manufacturer's warranty.



DISPOSAL

Dispose of all packaging materials in an environmentally responsible manner.

TROUBLESHOOTING

PROBLEM

POSSIBLE CAUSE AND SOLUTION

Unit fails to power on.

Unit is not plugged in. Plug power cord into electrical outlet.

Household circuit breaker/ground fault circuit interrupter has tripped or blown fuse. Reset circuit breaker/ground fault circuit interrupter, or replace fuse. For assistance, see IMPORTANT INSTRUCTIONS.

Unit is damaged or in need of repair. Cease usage and unplug. Contact Consumer Service for assistance.

Unit makes bubbling or gurgling sound.

This is normal. Water is being dispensed into Base.

Unit is not producing desired amount of humidity or mist output has ceased.

Water level in Tank is empty or too low. Refill with clean, cool tap water. See HOW TO USE.

Unit has reached its set point. When set humidity level is reached, the unit will not produce mist until humidity level in the room drops below humidity set point.

Airflow is blocked. Remove obstruction.

Unit settings are too low. Set to High Output and Continuous Humidity for maximum humidity output.

White dust has accumulated on Mist Outlet or on flooring below.

Mineral Cartridge is no longer removing minerals from water. Cartridge needs to be replaced. See MINERAL CARTRIDGE.

Unit and Transducer is in need of cleaning. See CLEANING.

Water is too hard. Use distilled water.



WARRANTY

We expect this product to be perfect. If you're not satisfied with this product, let us know.

We're Here to Help 800.234.0604 vornado.com help@vornado.com

Vornado Air LLC ("Vornado") warrants to the original consumer or purchaser this Vornado® Ultrasonic Whole Room Humidifier ("Product") is free from defects in material or workmanship for a period of five (5) years from the date of purchase. If any such defect is discovered within the warranty period, Vornado, at its discretion, will repair or replace the Product at no cost.

For warranty or repair service:

Call 1-800-234-0604 or email help@vornado.com to obtain a Return Authorization ("RA") form. Please have or include your Product's model number and serial number, as well as your name, address, city, state, Zip code and phone number when contacting Vornado for warranty service.

After receiving the RA form, ship your Product to:

Vornado Air LLC Attn: Warranty & Repair 415 East 13th Street, Andover, KS 67002. For your convenience, please have your model number and serial number when contacting Vornado with service inquiries. To ensure proper handling, packages must be clearly marked with the RA number. Packages not clearly marked with the RA number may be refused at the receiving dock, Please allow 1-2 weeks for repair and return of your Product after the Product is received

Repairs not covered by the warranty or outside the warranty period will require a fee to cover the cost of materials, labor, handling and shipping.

This warranty does not apply to defects resulting from abuse of the Product, modification, alteration, mishandling, improper maintenance, commercial use or repair or service of the Product by anyone other than Vornado; damages which occur in shipment or are attributed to acts of God. Improper product use, which includes using an external device that alters or converts the voltage or frequency of electricity, or shipping a Vornado product to a country not intended for use will void all warranties. Any unauthorized product modification, repair by unauthorized repair center or use of non-approved replacement parts is not recommended and any consequences will not be covered by support services or product warranties. The product warranty will be honored only on models that are being used in the country intended. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, VORNADO SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state. The manufacturer assumes no responsibility for damage or injury caused by failure to follow these instructions, improper product use or unauthorized product modifications. Any such actions will invalidate the product warranty.

All company names and product names are trademarks of their respective owners. ©All rights reserved. All technical information, data and instructions for the installation. connection and operation contained in these instructions for use correspond to the latest available information at time of printing. The contents of this manual may differ slightly from the actual product. Observe any additional supplements.





Vornado Air, LLC 415 East 13th Street, Andover, Kansas 67002 800.234.0604 | vornado.com